



# Contactless Measurement of Level

**LB 440** 



DASTEC S.R.L. Hipólito Yrigoyen 850. Piso 3 Of. 335 C1086AAN Buenos Aires - Argentina TE: (54-11) 4343-6200 // 4331-2288 Fax: (54-11) 4334-3120 Email: dastecsrl@dastecsrl.com.ar Web: www.dastecsrl.com.ar







## **Level Gauge LB 440**

The measuring system **LB 440** is used for the **contactless, continuous** measurement of liquids and bulk materials in reactors, vessels and bunkers. The measurement is not

affected by the chemical and physical properties of the product being measured. The level measurement is adapted to the specific geometry of the vessel.

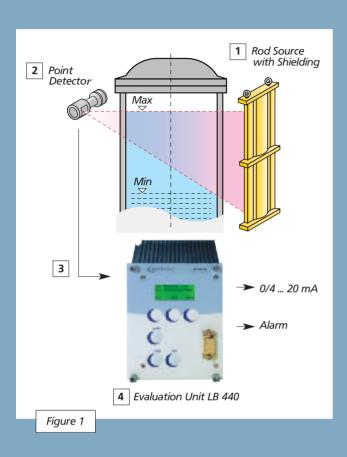

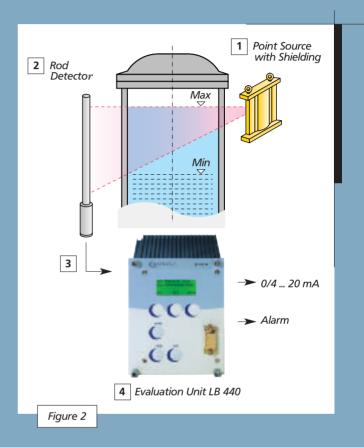


# **Measuring Arrangement**

Figures 1 and 2 show schematic layouts of typical measuring arrangements. It is comprised of the source 1 mounted on the outside of the container, a detector 2 and the connection cable 3 from the detector to the evaluation unit LB 440 4. Source and detector form a radiation field corresponding to the size of the measuring range. This can be achieved by using a rod-shaped source and a point detector (Fig. 3) or a point-shaped source and a rod detector (Fig. 4), for special

applications a rod source and rod detector (Fig. 5) can be used. Which of these options is selected is dependent upon the measuring geometry, the measuring task, ambient factors or even considerations of space and money. For larger measurement ranges several rod detectors can be used together in a line. Signals from individual detectors are transmitted via slave units to a master evaluation unit for indication of product level.

BERTHOLD

# **General Arrangements**

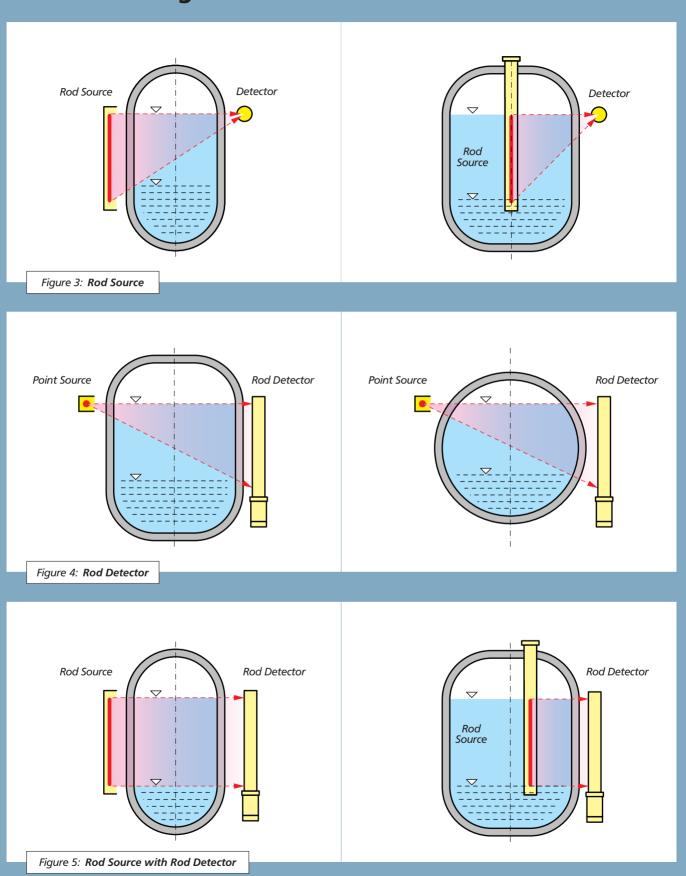

#### **Evaluation Unit LB 440**

The evaluation unit incorporates state of the art microprocessor technique with 32-bit processor for high computing performance and high accuracy together with most simple operation. The software is tailored to the measuring principle. More than 40 years of experience in the field of radiometric measurement technique are consequently utilized.

In addition, the evaluation unit features:

- Compact design in 19"-module (3HE; 21 TE) for installation in a wall housing or 19"racks.
- Illuminated 4-line LCD-display.
- Operation via 6 membrane keys.
- Convenient multilingual and user-guided dialog via "softkeys".
- Continuous self-monitoring of the electronics.
- Data protection without battery backup by saving all calibration data to a FLASH-Memory.

#### **Source with Shielding**

All radioactive sources used for industrial applications are encapsulated in stainless steel, so that radioactive substance is kept separate and isolated from the material beeing measured. Depending on the measuring task, one can either work with 60Co or 137Cs sources. The radioactive material of the 60Co rod source is a metal wire wound around a mandrel of the required length. By winding at a variable pitch, any linearization can be achieved, even for complicated measuring geometries. Depending on the measuring task, either <sup>60</sup>Co or <sup>137</sup>Cs are selected as point sources. The sources are built into sturdy shieldings which include a lockable radiation exit slit that is directed toward the detector. The shielding is adapted to the required activity so that operating personnel are never exposed to any



excessive radiation levels. For rod sources as well as for point sources, the shielding is installed vertically on a bracket. The radiation channel is specially designed for this measuring arrangement. This ensures a simple and non-critical installation.

#### Detectors

Typically, scintillation counters are used as radiation detectors for continuous level measurements. These detectors consist of a NaI crystal; the scintillator of rod detectors are made of plastic. Flashes of light are created in the detector by the radiation. The number of flashes is proportional to the intensity of the radiation field. The crystal is optically coupled to a photomultiplier which, together with the electronics, converts the flashes of light into electrical pulses. The special benefits of scintillation counters are their high sensitivity to Gamma radiation, low source activity and unlimited useful life. The signals are transfered to the evaluation unit via two-wire technique with ASK-modulation to ensure a high level of interference immunity.

#### **Contactless Measurement**

#### **Principles of Measurement**

The Level Gauge LB 440 operates according to radiometric principle, utilizing the physical law that gamma radiation is attenuated as it passes through matter. Since the source type and the absorption path are constant in this case, the measurement is affected only by the presence of the medium. All other physical properties such as pressure, temperature, viscosity and colour have no influence. Since the absorption law follows an exponential curve, the measuring effect with normal container dimensions becomes practically independent of any density changes in the medium being measured.

As a consequence, the radiometric measuring method features a very high level of operational safety and requires practically no maintenance, even under difficult operating and ambient conditions. The use of scintillation counters as radiation detectors and careful project engineering ensure that the lowest possible source activities and the best shieldings will be used. The radiation exposure of the operating staff will clearly stay below the extremely low values permitted by law, which are about as high as the natural environmental radiation. The use of radiometric measuring systems has to comply with the applicable radiation protection regulations.

#### **Project Engineering**

When designing the level gauging system, the special features of the production process and possible contingent conditions should be taken into account, in addition to the actual measuring task.

Relevant data along with dimensional drawings should therefore be provided.

#### **Engineering Data**

Type and dimensions of the vessel

Wall thickness and wall material

Thickness and density of any insulation

Size and position of the required measuring range

Density and any special properties of the medium in vessel


Gas density under operating conditions in high pressure systems


Maximum speed of level variations


Ambient temperature at the detector

Agitators or other internals, if any

#### Other Applications from Berthold

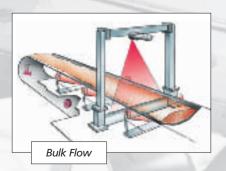

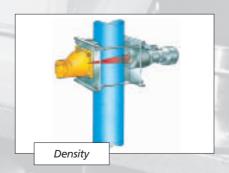

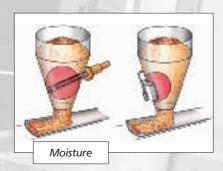

DASTEC S.R.L. Hipólito Yrigoyen 850. Piso 3 Of. 335 C1086AAN Buenos Aires - Argentina TE: (54-11) 4343-6200 // 4331-2288 Fax: (54-11) 4334-3120 Email: dastecsrl@dastecsrl.com.ar Web: www.dastecsrl.com.ar

# LB 440 · 022002 · Id.Nr. 32814PR2 Rev.00 · www.walliser-partner.de · MA

## **Technical Data LB 440**

Evaluation Unit LB 440					
Design	19" module 3 HE, 21 TE				
	protection class IP 20				
Weight	approx. 2 kg				
Power supply	115/230 V AC +/-10 %				
	18-32 V DC, 24 V AC				
Power consumption	approx. 30 VA (AC) 30 W (DC)				
Operating temp.	0 +50° C (273 bis 323 K)				
	no condensation				
Storage temp	-40 +70° C (233 bis 343 K)				
	no condensation				
Arrangements	in a panel				
	in a 19" rack (max 4 Units)				
	wall mounted cabinet				
Detector connection	[EEx ib] IIB				
	[EEx ib] IIC (Option)				
Digital inputs	external start/stop				
Digital output	1 relay for failure message				
	2 relays for threshold				
	max load: (non inductive)				
	AC: max. 250 V, max. 1 A, max. 200 VA				
	DC: max. 300 V, max. 1 A, max. 60 W				
Interfaces	RS 232 on front site / RS 485 rear				
Multi lingual operation	English, German, French				

Design modifications may occur without notice

Probes						
Housing		Nema 4X and IP 65				
		Stainless Steel				
Cable entra	Cable entrance		M16 N		112	
Cable diameter		5 10 mm 4 7 mm		7 mm		
Connection cable		LiYCY 2 x 1 mm <sup>2</sup>				
Max. cable length		with Berthold cable #32024				
			EEx ib IIB EE		k ib IIC	
			1000 m 2!		50 m	
Explosio	n Proof					
ATEX		II 2G E	II 2G EEx ib d IIC T6			
Dust (on re	equest)	II 2 D IP65 T 80° C				
FM (option)		Class I Division 1 Group A, B, C, D				
		Class II Division 1 Group E, F, G				
		Temp. Class T6 (85° C)				
<b>Point Pro</b>	bes	Nal (TI) Scintillation counters				
Temp. stability		+/- 0,1 % (at -20 +50° C)				
Operating temp.		– 40 +60° C (233 333 K)				
Water cooling		option				
Storage temp.		– 40 +70° C (233 343 K)				
Туре	Crytall size	EEx	Dose rate	(μSv/h)	Weight (kg)	
			for 300	cps		
LB 4401-01	25/25	Х	2,7		6	
LB 4401-02	40/35	Х	1,1		6	
LB 4401-03	50/50	Х	0,5	18		
LB 5401-01	25/25		2,7		6	
LB 5401-02	40/35		1,1		6	
LB 5401-03	50/50	0,5 18			18	
<b>Rod Dete</b>	ectors	Plastic	scintillation c	ounters		
Temp. stability		+/- 0,5 % (at -20 to +50° C)				
Operating/						
Storage temp.		– 40	+55° C (233	328 K)		

Typical dose rate at empty: 1µSv/h

Water cooling

Туре	Sensitive	Dose rate	Weight (kg)	Weight (kg)
	detector	(μSv/h)	without	with water
	length (mm)	1000 cps	water cooling	cooling
LB 4405-01	500	0,17	9	11,5
LB 4405-02	750	0,15	10,5	14
LB 4405-03	1000	0,09	12	17
LB 5405-04	1250	0,07	13,5	19,5
LB 5405-05	1500	0,06	15	22
LB 5405-06	2000	0,04	16,5	25

option

#### **DASTEC**

Dastec S.R.L.

Representantes / Distribuidores Exclusivos: Hipólito Yrigoyen 850, piso 3° Of.335 C1086AAN Buenos Aires - Argentina Tel.: (54-11) 4343-6200 // 4331-2288

Fax: (54-11) 4334-3120 E-mail: dastecsrl@dastecsrl.com.ar Web: www.dastecsrl.com.ar



