



Representantes / Distribuidores Exclusivos

Buenos Aires, Argentina Tel.: (54 - 11) 5352-2500 Email: info@dastecsrl.com.ar Web: www.dastecsrl.com.ar

S40 Suspended Solids Sensor

Get better control of your suspended solids, control your losses, control product change, control concentration, control dosing - accurately and repeatedly.

- Four beam self compensating sensor, virtually eliminates drift due to contamination or electronic ageing.
- One piece body, no lenses to leak, glass free.
- Range of sensors to best suit application.
- · Both Immersion and Hygienic configurations.
- · Simple user interface.
- Accurate, repeatable & reliable.

S40 Measurement Range, 0 to 2.5g/L normal activated sludge. 0 to 1.5% Milk Fat



S40-3HY



S40-VN



S40-IMM

S40-3HY 3A CERTIFIED AND S40-VN VARINLINE® INLINE HYGIENIC STYLE -

Hygienic style sensors are designed for installation directly into food product lines where CIP cleaning is used.

Hygienic Style Applications include;

- Extensive use in Dairy Process.
- Product break through on plate heat exchangers.
- Solids content in Whey.
- Filtration Monitoring.

S40-IMM IMMERSION STYLE

Immersion style sensors are designed for continuous on-line monitoring of suspended solids in industrial/municipal water and waste water treatment plants.

Immersion Style Applications include;

- · Effluent monitoring in clarifier overflow weirs.
- Raw water inlet turbidity measurements in water treatment plants.
- · Final Effluent Monitoring.
- · White Water solids monitoring.
- Return Activated Sludge (RAS)

Specifications

Measuring Range

Immersion Sensor:

0 to 2.5 g/L in normal activated sludge Hygienic Sensor:

0 to 1.5% Milk Fat

(the measuring range will vary according to media and particle characteristics)

Accuracy

+/- 2% of reading

Repeatability

+/- 1% of reading

Temperature

0 to 85°C operating range

Pressure

10 Bar

Cable:

Polyurethane covered cable rated to 95°C. Extension cables can be supplied to extend the cable up to 50m.

Transmitter

Quadbeam MXD75 or MXD73

Model No. Selection Guide

Body Style

\$40-IMM- Immersion Style Body

S40-3HY - Hygienic Style Body with 3" Triclover fitting.

S40-VN - Hygienic Style Body to fit Type N Varinline® access unit.

Wave Length

880nm - Standard. Other wave lengths available

Body Material

PP - Polypropylene

Cable


10- Both immersion and hygienic sensors are supplied with a 10m cable as standard. Other lengths available

Connector

NC- No Connector. Cores stripped and crimped for direct connection with the MXD Transmitters **CA** - Amphenol Connector. For use with Hygienic sensors using extension cables. Sample model no; S40-IMM-880-PP-10-NC

Optional Extras:

Cleaner - powered using air at 10Bar.

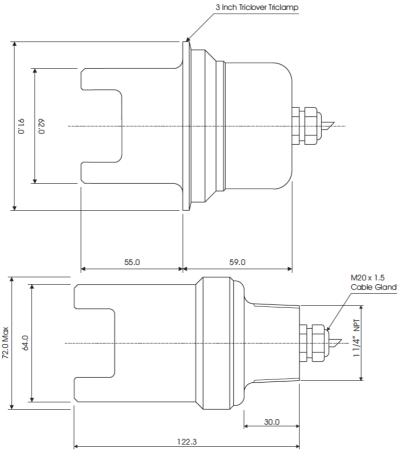



Representantes / Distribuidores Exclusivos Buenos Aires, Argentina Tel.: (54 - 11) 5352-2500 Email: info@dastecsrl.com.ar Web: www.dastecsrl.com.ar Quadbeam Technologies Ltd 10/16 Alpito Place, Pukekohe, Auckland, New Zealand PO Box 1142, Pukekohe, Auckland 2340, New Zealand ph+64-9-2384609